


INSTRUCTIONS FOR REPLACING TILT PIN

STEP 1. REMOVING THE TILT PIN

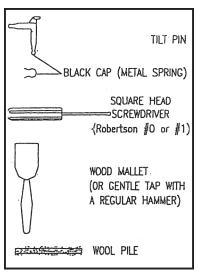



TOOL LIST

STEP 2.

(Step 3).


- 1. Place the screwdriver on to the tilt pin's black cap as shown on the picture below.
- 2. Tap on black cap with a screwdriver and wood mallet to flatten down the black cap.
- 3. This will help to remove tilt pin from profile.
- 4. Follow the same steps for both sides.

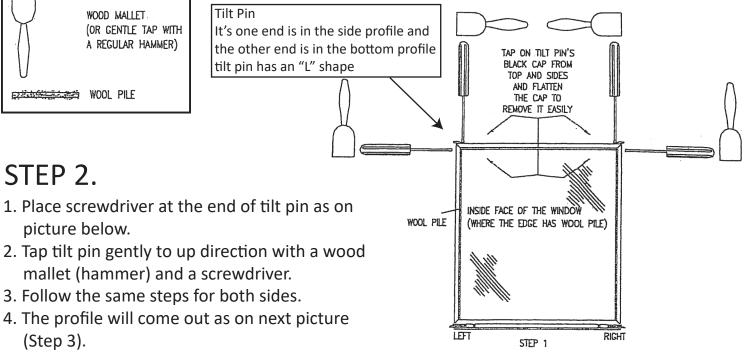

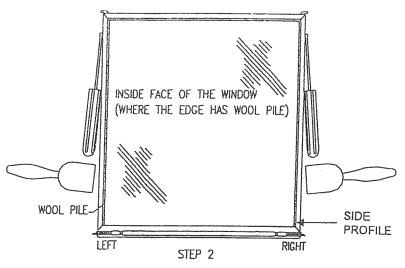



STEP 3.

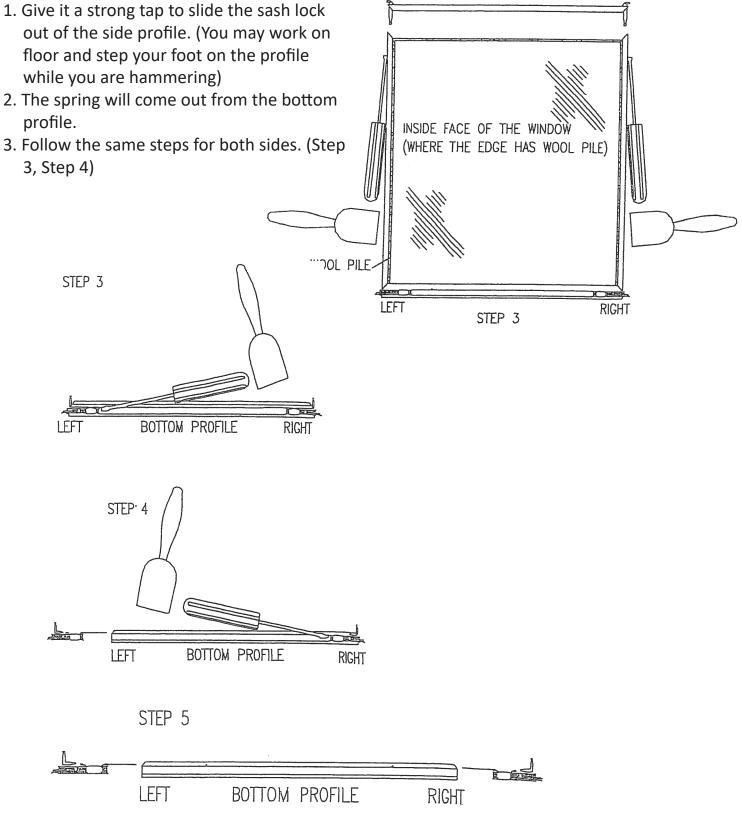

REPLACING THE NEW SASH LOCK

- 1. Replace the spring first. Make sure the spring is hooked to small nail on one side.
- 2. Replace the new sash lock. The red plastic extension on sash lock supposed to be facing you.
- Slide the sash lock into bottom profile's large channel.
- 4. Make sure it is attached to the spring.
- 5. Place corner tilt pins into both profiles as shown at the picture below.
- 6. Follow the same steps for both sides.


TOP PROFILE

SIDE

PROFILE



Place the spring into the bottom profiles small channel where you previously removed the tilt pin and spring from.

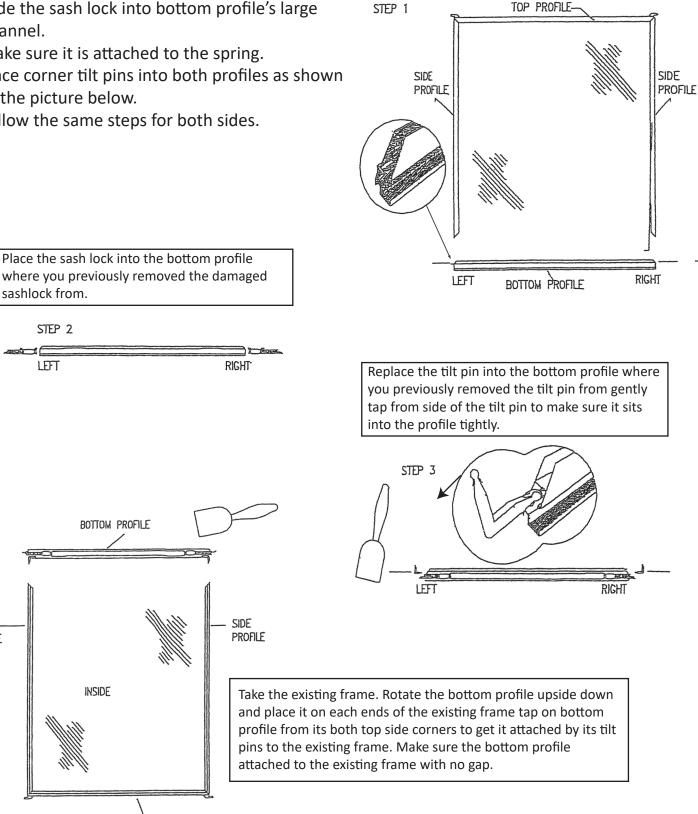

3